


1494 STAINLESS STEEL TRAILER BRACKET

LC250 LandCruiser Prado



Kit Content




2 x Anderson Covers




6 x M4 Flange Nuts




4 x M4 Nuts

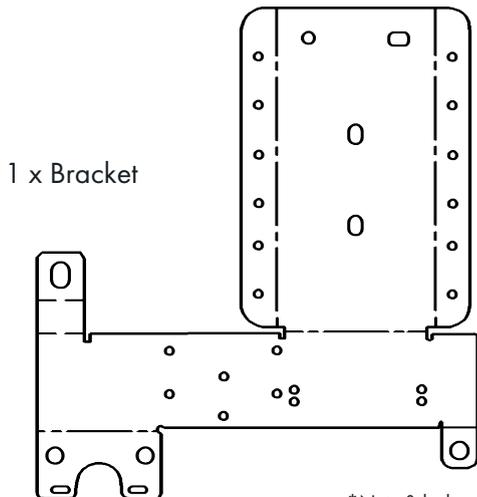

1 x Bracket

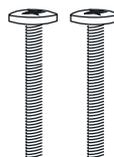

2 x 40mm Bolts
(For Dual Anderson Plug)

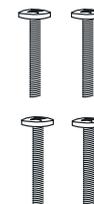

4 x 25mm Bolts
(For Single Anderson Plug or Trailer Vision)



4 x 16mm M4 Bolts



3 x M8 Washers

Nuts & bolt set comes with screws, washers & nuts that may not be used.

Factory mounting location



Factory Bolts




(OPTIONAL) For a more perpendicular fit, use the 3 included washers between the bracket and factory tow bar, not the bolt entry side.




For connecting Trailer Vision Plug
(Using 4 x 25mm bolts)

1/4 inch Airbag Valve Install Location

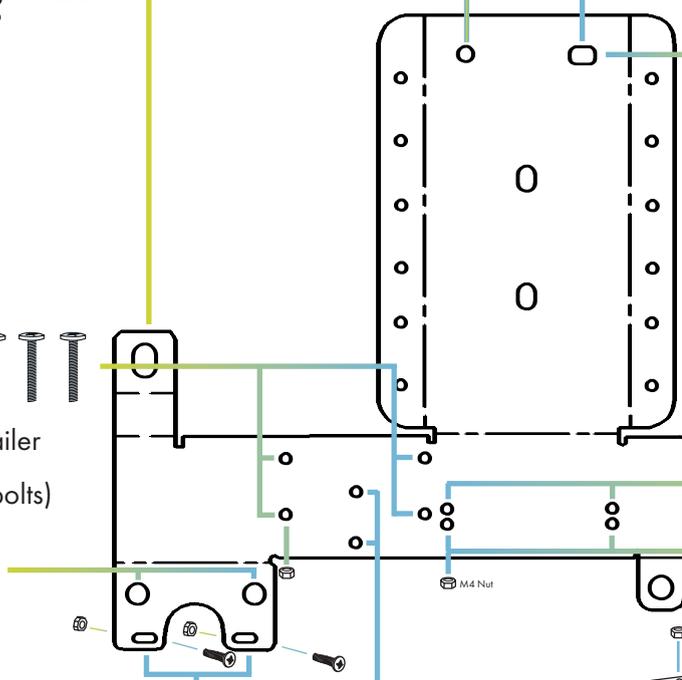

2 x 16mm M4 Bolts

2 x 16mm M4 Bolts
2 x M4 Flange Nuts for Apollo & Polaris Caravan Camera Sockets

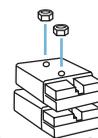

Anderson Plugs (not included)
You will need to widen the standard holes to a 4mm hole



Anderson Covers

COMING SOON

Install Video

ANDERSON PLUGS

Choose one of the two provided lengths depending on how many anderson plugs you are using (Anderson Plugs not included)

SINGLE ANDERSON



2 x 25mm Bolts
2 x M4 Nuts

DUAL ANDERSON



2 x 40mm Bolts
2 x M4 Nuts

SPACER WASHERS


Choose either bracket position based on your setup (see install video)

ANGLED FIT



NO WASHERS

PERPENDICULAR FIT

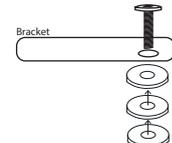

Get In Touch with Us!

Phone: 07 3137 2727
Email: Sales@advancedice.com.au
Address: U9 87 Webster Rd, Stafford QLD 4053

